

SINCLAIR ZX81

KEYBOARD CONNECTIONS



RIBBON CABLE TO
KEYBOARD

KEY	REFERENCE	KEY	REFERENCE
A	5,D	M	3,H
B	1,H	N	2,H
C	2,F	O	4,E
D	3,D	P	5,E
E	3,B	Q	5,B
F	2,D	R	2,B
G	1,D	S	4,D
H	1,G	T	1,B
I	3,E	U	2,E
J	2,G	V	1,F
K	3,G	W	4,B
L	4,G	X	3,F

	5	4	3	2	1	1	2	3	4	5	
A	1	2	3	4	5	6	7	8	9	0	C
B	Q	W	E	R	T	Y	U	I	O	P	E
D	A	S	D	F	G	H	J	K	L	NL	G
F	Shft	Z	X	C	V	B	N	M	.	Spc.	H
	5	4	3	2	1	1	2	3	4	5	

KEY	REFERENCE	KEY	REFERENCE
Y	1, E	.	4, H
Z	4, F	NL	5, G
0	5, C	Spc.	5, H
1	5, A	Shft.	5, F
2	4, A		
3	3, A		
4	2, A		
5	1, A		
6	1, C		
7	2, C		
8	3, C		
9	4, C		